AROMA

Pava eléctrica sauoioonijsui ap jenuejaj

www.AromaCo.com/Support.

encontrar en linea. Visita: biezas de repuesto se pueden breguntas comunes e incluso Las respuestas a muchas



Instruction Manual AROMA Hot H₂0 X-PressTM Electric Kettle

gratuito a **1-800-276-6286**. ayudarle. Llámenos al número cliente estará encantado de Nos expertos de servicio al



Questions or concerns about your electric kettle? Before returning to the store...



Aroma's customer service experts are happy to help. Call us toll-free at 1-800-276-6286.



Answers to many common questions and even replacement parts can be found online. Visit www.AromaCo.com/Support.



tienda... Antes de regresar a la de su pava eléctrica? SPreguntas o dudas acerca

ANOAA









Congratulations on your purchase of the Aroma® Hot H₂0 X-Press™, the best way to boil! The Hot H₂0 X-Press™ is the ideal solution for any need in the kitchen that calls for boiling water in a hurry. It's perfect for soothing hot tea, an easy bowl of noodles, an invigorating cup of instant coffee, a hearty helping of oatmeal, delicious hot chocolate and so much more!

Faster than the stovetop, your new kettle will boil water at a blazing cup-a-minute speed. And there's no need to worry about a forgotten kettle, as the Hot H₂0 X-Press™ shuts off automatically once water has boiled.

Serving favorite hot beverages to friends and family is made easy as the Hot H₂0 X-Press™ lifts off the power base for cordless pouring.

For more information on your Aroma® Hot H₂0 X-Press™, or for product service, replacement parts and other home appliance solutions, please visit us online at www.AromaCo.com

See what's brewing with Aroma online!

AromaHousewares





www.AromaTestKitchen.com





AromaHousewares

Published By: Aroma Housewares Co. 6469 Flanders Drive San Diego, CA 92121 U.S.A. 1-800-276-6286 www.AromaCo.com ©2014 Aroma Housewares Company All rights reserved.



AromaHousewares





lodos los derechos reservados. ©2014 Aroma Housewares Company www.AromaCo.com 1-800-276-6286 .A.S.U San Diego, CA 92121 6469 Flanders Drive Aroma Housewares Co. Publicada Por:



.moo.oOsmorA.www

Para más información sobre su Aroma® Hot H₂0 X-Press™, consultas sobre servicio técnico, piezas de repuesto y otros electrodomésticos, visitenos en

Servir las bebidas calientes tavoritas a su tamilia y amigos es tácil ya que la Hot H_2U X-Press" se puede retirar de la base para usarse como jarra.

tuego, ya que la Hot H_2^0 X-Press''' se apaga automàticamente cuando el agua hierve.

Su nueva pava hierve el agua a gran velocidad, a una taza por minuto, mucho más rápido que sobre una hornalla. Y no hay que preocuparse por olvidarse la pava en el

ideal para cuando se necesita hervir agua rapidamente.

energizante taza de cate inatantáneo, un sustancioso plato de avena, un delicioso chocolate caliente, e infinidad de cosas más. La pava Hot H₂U X-Press''' es la solucion Felicitaciones por comprar la pava Aroma" Hot H_2^0 X-Press", ila mejor forma de hervir agual ideal para preparar un relajante té caliente, un sencillo plato de fideos, una



dentro del norno callente. 10. No coloque la pava sobre o cerca de una hornalla electrica o a gas, o mesada, o que toque superficies calientes. 6. Evite que el cable de alimentación cuelgue del borde de la mesa o

riesgo de incendio, descargas eléctricas o danos personales.

reparación o ajuste mecánico o eléctrico de la pava.

dnitar piezas, y de ilmpiar el artefacto.

1. El uso de accesorios no recomendados por Aroma® puede resultar en

6. Nunca utilice el artefacto con el cable de alimentación o ficha danada,

alguna forma. Consulte al Servicio al Cliente de Aroma® para la revisión,

o al pa presentado signos de mai funcionamiento o ha sido danado de

2. Do not touch hot surfaces. Use handles or knobs. Metal surfaces 8. No use el artetacto al aire libre. become extremely hot.

> 3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or kettle in water or any other liquid. See instructions for cleaning.

4. Close supervision is necessary when the appliance is used by or near

5. Always unplug the appliance from the outlet when not in use and before cleaning. Allow the kettle to cool completely before putting on or taking off parts, and before cleaning the appliance.

6. Do not operate appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or electrical/ mechanical adjustment.

7. The use of accessory attachments not recommended by Aroma®

Housewares may result in fire, electrical shock or injury.

Do not use outdoors.

9. Do not let cord hang over the edge of a table or counter or to touch hot surfaces.

10. Do not place kettle on or near a hot gas or electric burner or in a

11. To disconnect, turn any control to the "OFF" position, then remove the plug from the wall outlet.

12. Do not use kettle for other than its intended use

13. The power base must only be used with the provided kettle.

14. Only use the kettle to heat water. No other liquids should be placed inside the kettle.

15. Do not unscrew any screws on the kettle or power base or attempt to disassemble them in any way.

16. Do not move kettle during the heating process.

17. This appliance is for household use only.

18. Do not immerse this appliance or any of its parts in water.

19. Scalding may occur if the lid is removed during the boiling cycle.

20. Caution: If water exceeds the "MAX" line, the boiled water may spill out.

21 Use only on a level, dry and heat-resistant surface.

22 Always unplug from the base of the wall outlet. Never pull on the cord.

23 The electric kettle should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances the electric kettle may not operate properly.

24. Do not open the kettle lid when in operation.



GUARDE ESTAS INSTRUCCIONES

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

24. No abra la tapa de la pava durante la operación. baya puede no funcionar correctamente. electrodomesticos en funcionamiento. Si se sobrecarga el circuito electrico la 23. Use la pava electrica en un circuito electrico diferente al de otros 22. Desenchute siempre la pava desde la base en el enchute de la pared. Nunca tire 21. Use la pava unicamente en una superficie nivelada, seca y resistente al calor. boaus aerramarse. 20. Precaucion: Nunca llene con agua más del nivel "MAX" porque el agua hervida 19. Nunca quite la tapa mientras la pava está en funcionamiento. 18. No sumerja el artefacto o alguna de sus partes en agua. 11. Este producto es apto solo para uso doméstico. 16. No mueva la pava mientras calienta agua. 15. No intente quitar tornillos de la pava o base, o desarmar la pava por su cuenta. 14. Use la pava solo para calentar agua. No coloque otros liquidos dentro de la pava. 13. La pava electrica puede ser utilizada unicamente con la base suministrada.

11. Para desconectarla, ponga el interruptor en "OFF", luego desenchúfela.

- limpiarlo. Espere a que la pava se entrie por completo antes de poner o 5. Siempre desenchute el artetacto cuando no este en uso y antes de pava sin la supervisión de un adulto. 4. No deje la pava al alcance de los ninos. Evite que los ninos utilicen la anwerja el cable, enchute o pava en agua u otro liquido. 3. Para evitar incendios, descargas electricas y lesiones personales, no anberticies metalicas pueden calentarse en extremo. 2. No toque las superticies calientes. Use las manijas o los botones. Las 12. No utilice la pava para otro propósito distinto para el cual fue disenada.
 - J. Lea las instrucciones cuidadosamente antes de usar el Cuando se usen aparatos electricos, siempre deberán observarse las precauciones básicas de seguridad, incluyendo las siguientes:
 - heated oven.

IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed, including the following: 1. Read all instructions carefully before using the appliance.



IMPORTANT SAFEGUARDS

Short Cord Instructions

- 1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- 2. Longer extension cords are available and may be used if care is exercised in their use.
- 3. If a longer extension cord is used:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.



Polarized Plug

This appliance has a **polarized plug** (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

, THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD



iSONIN

TETOS DE FOS

Instrucciones de cable corto

- euredarse con un cable más largo. 1. Se proporciona un cable eléctrico corto con el propósito de reducir el riesgo de tropezarse o
- 2. Hay cables de extensión más largos disponibles y deben ser usados con sumo cuidado.
- rs clasificación electrica marcada en el cable de extensión debe ser por lo menos
- El cable más largo debe ser colocado de manera que no cuelguepor el borde del igual que la clasificación eléctrica del aparato.
- mostrador o mesa en donde pudiera ser jalado por un nino o alguien pudiera

ropezarse con el cable sin querer.

3. Si se usa un cable de extensión más largo:

ADAZIRAJO9 AYOJ9


21 este aparato tiene ploya polarizada:


cnaldnier peligro.

Si este estropeado el cordon electrico, hay que ser reemplazado por el tabricante o su agencia de servicio u otra persona calificada para hacer que se evita

entra completamente, da vuelta a la clavija. Si aun la clavija, no puede entrar, llame a un electricista calificada. No intente de modificar la clavija, es muy peligroso. Para reducir el riesgo de descarga eléctrica, este ploya intencionalmente solo debe de enchutar un lado en enchutes de luz de ploya polarisada. Si la clavija no

DENTIFICACIÓN DE PARTES

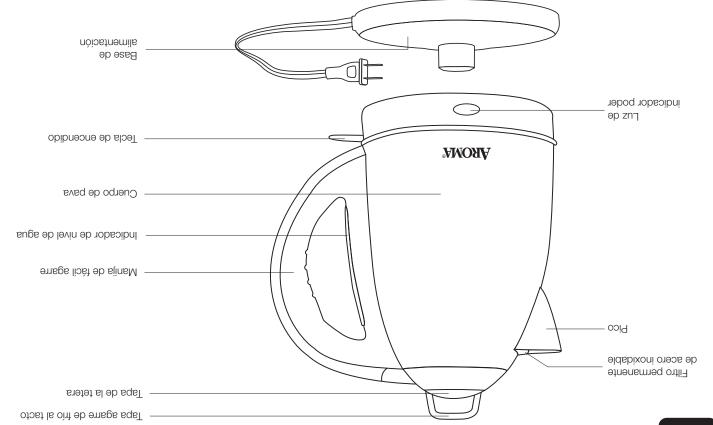

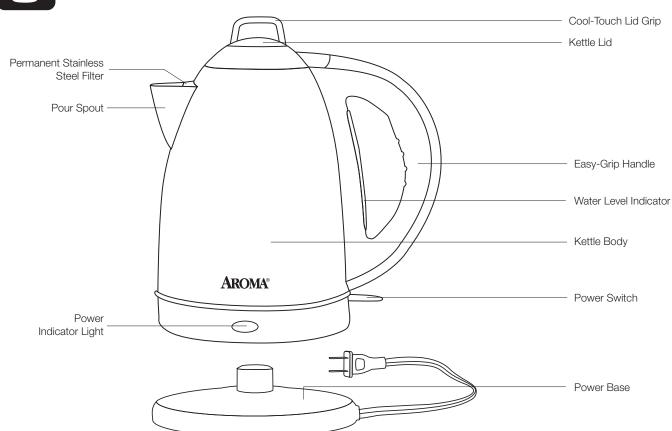





BEFORE FIRST USE

Before using for the first time, it is recommended to clean the interior of the kettle thoroughly. Please follow the procedures below before using the kettle:

- 1. Remove all packing materials and make sure that the product has been received in good condition.
- 2. Taking care to keep the electrical components on the exterior of the kettle dry, wipe out the interior of the kettle with a damp cloth. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the lid closed.
- 3. Rinse out the inside of the kettle thoroughly with water.
- 4. With a damp cloth, gently wipe off the exterior of the kettle. Do not wipe off electrical components as this may cause damage to the unit.
- 5. Dry all parts completely.
- 6. It is recommended to run your kettle through one boiling cycle before using it to consume beverages. Following the instructions in "To Boil Water" on page 5, boil one kettle of water. When water has boiled, pour it out and rinse the inside of the kettle once more. The kettle is now ready for use.

ANTES DE USAR POR PRIMERA VEZ



Antes de usar la pava por primera vez, se recomienda limpiar bien el interior. Antes de usar la pava siga estas instrucciones:

1. Hefire todo el material de empaque y compruebe que el producto haya llegado en buenas condiciones.

p. Seque cuidadosamente todas las partes.

3. Enjuague bien el interior de la pava con agua.

hervir agua" en la **pàgina 5**, y hierva una pava de agua, luego vièrtala y vuelva a enjuagar el interior. La pava està ahora lista para usar.

6. Se recomienda realizar un ciclo completo de ebullición de agua antes de hervir agua para consumo. Siga las instrucciones en "Cómo

4. Limpie suavemente el exterior de la pava con un paño húmedo. No limpie con un paño húmedo los componentes electricos ya que podría dañar


- introducir la mano en la pava, vierta agua tibia jabonosa en su interior y agitela con la tapa cerrada.
- 2. Limpie el interior de la pava con un trapo húmedo, con cuidado para mantener secos los componentes electricos en el exterior. Si no puede

AUDA RIVRAH OMÒD




Colodue la pava en la base de

3

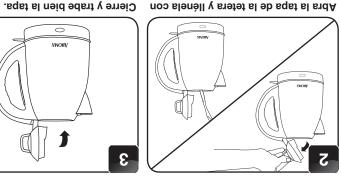

"XAM" y "MIM" serobsoibni nivel de agua debe estar entre los agua por la apertura de la tapa. El

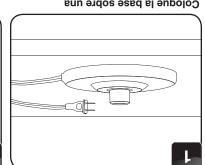

superficie, nivelada, estable y seca. Colodue la base sobre una




• Las partes de acero inoxidable se calientan durante el uso y tardan un tiempo en enfriarse. No toque el cuerpo de acero inoxidable


• Para cerrar la tapa mientras la pava está caliente, presione tapa agarre de trío al tacto. Las partes de acero inoxidable de la tapa se o la tapa hasta que la pava no se haya enfriado por completo.




TO BOIL WATER

Place power base on a sturdy, level and dry surface.

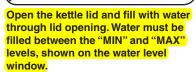


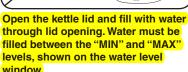

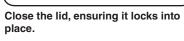






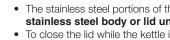


- The stainless steel portions of the kettle will become extremely hot during use and remain hot for sometime after. Do not touch the stainless steel body or lid until the kettle has cooled completely.
- To close the lid while the kettle is hot, press down on the plastic cool-touch lid grip. The stainless steel portions of the lid will become CAUTION


TO BOIL WATER (CONT.)

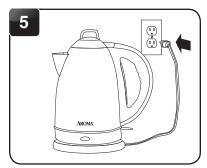

Plug the power cord into an available outlet.

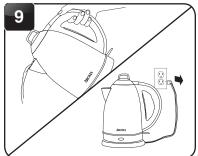


When finished serving, pour out any remaining water and unplug the power cord.

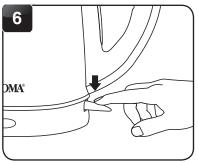

Press down on the power switch. The power indicator light will illuminate and the kettle will begin heating the water.

NOTE

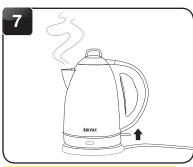

Once the water reaches a boil, the power switch will flip up and the kettle will automatically shut off.



Using the easy-grip handle, lift the kettle off the power base to serve. Do not touch the stainless steel body, as it will be hot.



que estará caliente. el cuerpo de acero inoxidable, ya bosición y la pava se apaga en forma pava de la base para servir. No toque tecla de encendido cambia de Con la manija de fácil agarre, retire la Una vez que el agua hierva, La




tuncionar de nuevo después de se retirala y regresó a la base y baja la temperatura interior a un nivel seguro. a apagarla. La tecla de encendido no volverá automáticamente a la posición "OFF". La pava comienza a

• Si la pava se calienta con nada de agua, el mecanismo interno de seguridad se activará automáticamente


automática. s calentar.


La pava función correctamente cuando se le anade agua.


Nunca abra la tapa cuando el agua está en ebullición.

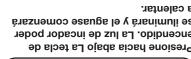

Utilice solo con agua.

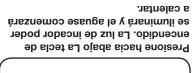

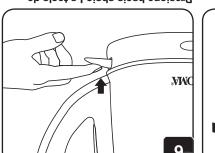

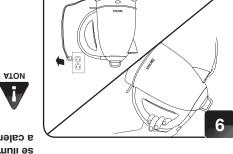


el resto del agua y desenchufe el Cuando termine de servir, vierta

artetacto.






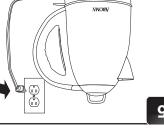


Enchufe el cable de alimentación.



- Never open the lid while water is boiling.
- If the kettle is heated with no water, the internal safety mechanism will automatically turn the kettle off. The power switch will not automatically return to the "OFF" position. The kettle will begin working again after the kettle is removed from and returned to the base and the internal temperature drops to a safe level. The kettle functions properly when water is added.

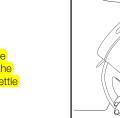





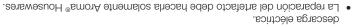

- No utilice limpiadores abrasivos, o esponjas de plastico o metal, para limpiar la pava o la base. Podria danar el extenor y generar nesgo de
 - No permita que ningún liquido entre en contacto con los componentes eléctricos.


 - Nunca sumerja la pava, cable, enchufe o base en el agua.

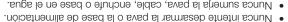

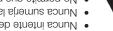

baya con la tapa cerrada. agua tibia jabonosa dentro de la no puede introducir la mano, agite suave, y agua tibia y jabonosa. Si


rimbie el exterior de la pava con

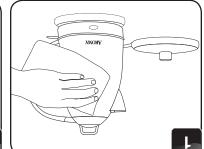

Enjuague bien. Vacie la pava.

rimpie el interior con una esponja

componentes eléctricos. un paño húmedo, evitando los

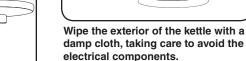


TO CLEAN



Always unplug the kettle and allow it to cool completely before cleaning.

Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand does not fit in the lid opening, swish warm, soapy water around inside the kettle with the lid closed.

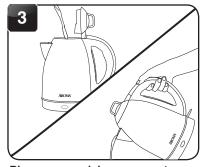

Rinse any remaining soapy water from the kettle. Drain.





- Never immerse the kettle, power cord, plug or power base in water.
- Always take care not to allow electrical components to come into contact with water.
- Do not use abrasive cleaners or scouring pads of any kind on the kettle or power base. This will cause damage to the finish and may create a risk of electrical shock.
- Any other servicing should be performed by Aroma[®] Housewares.





REMOVING MINERAL DEPOSITS


Hard water can leave mineral deposits that create scale build-up on the interior of the kettle. If mineral deposits occur, follow these steps:




Fill the kettle halfway with water.




Following the instructions in "To Boil Water" on page 5, bring the water to a boil.

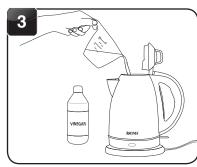

Add one cup of white vinegar to the water in the kettle.

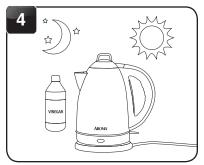

Allow the mixture to soak overnight.

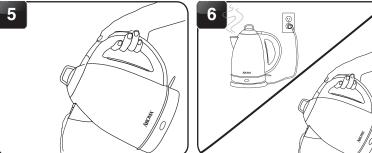

Empty the mixture and rinse out the




Refill the kettle with water only. Bring it to a boil and empty again. Repeat



• Using distilled water will help to prevent the buildup of mineral deposits.



Dejelo reposar toda la noche.

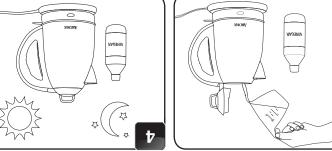

• Usar agua destilada evita la formación de sarro.





hervir agua" en página 5 para llevar

Repita las veces necesarias.

el agua a ebullición.

el agua a ebullición y vierta nuevamente. Vuelva a llenar la pava con agua. Lleve


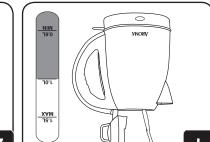


Figure la pava con agua hasta la

Vierta el liquido y enjuague.

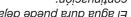

El agua dura puede dejar restos minerales que forman sarro en el interior de la pava. Si se forma sarro, siga las instrucciones a

CONSETO



RESOLUCION DE PROBLEMAS

Hay sarro en el interior de la tetera.	 Es normal que se acumule cierta cantidad de sarro después de periodos largos de uso y es consecuencia de los minerales que contiene el agua dura. La mejor manera de evitar el sarro es usar siempre agua destilada en la tetera. Para eliminar los depósitos, inténtelo llenando la tetera a hasta la mitad con agua y agregue unas cuantas rebanadas de limón y póngala a hervir. Si esto no funciona, por favor vea la sección de la página 8 titulada "Eliminación de depósitos minerales."
La tecla de encendido no baja y la tetera no se enciende.	 Asegúrese de que la tetera esté bien colocada sobre la base y que la base esté conectada a una toma de corriente eléctrica que funcione. El agua o la suciedad en la parte inferior de la tetera o la base pueden interferir con el funcionamiento de la tetera. Asegúrese de que la base de la tetera y la base estén secas y libres de suciedad. Si persiste el problema, por favor póngase en contacto con nuestro departamento de servicio al Cilente al número gratuito (800) 276-6286 o por correo electrónico a Customer Service@AromaCo.com.
El agua hierve pero la tecla de encendido y la luz indicadora no se apagan.	 La función de apagado automático no opera forma adecuada si la tapa no está bien cerrada. Deje que la tetera se enfríe y luego verifique que la tapa esté bien cerrada. Si persiste el problema, por favor póngase en contacto con nuestro departamento de servicio al Cliente al número gratuito (800) 276-6286 o por correo electrónico a CustomerService@AromaCo.com.
La tetera y luz indicadora no funcionan cuando la tecla de encendido hacia abajo.	 Asegúrese de que la tetera esté bien asentada en la base y que la base esté conectada a una toma de corriente eléctrica que funcione. Si la pava se calienta con nada de agua, el mecanismo interno de seguridad se activará automáticamente a apagarla. La tecla de encendido no volverá automáticamente a la posición "OFF". La pava comienza a funcionar de nuevo después de se retirala y regresó a la base y baja la temperatura interior a un nivel seguro. La pava función correctamente cuando se le añade agua. Si persiste el problema, por favor póngase en contacto con nuestro departamento de servicio al cliente al número gratuito (800) 276-6286 o por correo electrónico a CustomerService@AromaCo.com.

? TROUBLESHOOTING

The kettle and indicator light do not work when the power switch is down.	 Make sure the kettle is seated properly on the power base and that the base is connected to a functioning electrical outlet. If the kettle is heated with no water, the internal safety mechanism will automatically turn the kettle off. The power switch will not automatically return to the "OFF" position. The kettle will begin working again after the kettle is removed from and returned to the base and the internal temperature drops to a safe level. The kettle functions properly when water is added. If the problem persists, please contact our customer service department toll-free at (800) 276-6286 or through email at CustomerService@AromaCo.com.
The water is boiling, but the power switch and indicator light do not turn off.	 The auto shut-off function will not operate properly if the lid is not completely closed. Allow kettle to cool, then check to see that the lid is properly locked into place. If the problem persists, please contact our customer service department toll-free at (800) 276-6286 or through email at CustomerService@AromaCo.com.
The power awitch won't depress and the kettle will not turn on.	 Make sure that the kettle is seated properly on the power base and that the base is connected to a functioning electrical outlet. Water or debris on the bottom of the kettle or on the power base may interfere with the functioning of the kettle. Be sure that the base of the kettle and the power base are dry and free of debris. If the problem persists, please contact our customer service department toll-free at (800) 276-6286 or through email at CustomerService@AromaCo.com.
There are mineral deposits on the interior of the kettle.	 A certain amount of scale build-up is normal after long periods of use and is caused by minerals contained in hard water. The best way to prevent mineral deposits is to always use distilled water in the kettle. To remove deposits, try filling the kettle halfway with water and adding a few slices of lemon, then boil. If this does not work, please see the section on page 8 entitled "Removing Mineral Deposits."

LIMITED WARRANTY

LIMITED WARRANTY

Aroma Housewares Company warrants its products against defects in material and workmanship for two years from provable date of purchase in the United States.

Within this warranty period. Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$15.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not apply if the warranty period expired; the products has been modified by any unauthorized service center or personnel: the defect was subject to abuse, improper use not conforming to product manual instructions, or environment conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, lightning, earthquake, other natural calamities, war, vandalism, theft, brownouts or sags (damage due to low voltage disturbances).

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States

AROMA HOUSEWARES COMPANY 6469 Flanders Drive San Diego, California 92121 1-800-276-6286 M-F, 8:30 AM - 4:30 PM. Pacific Time

Website: www.AromaCo.com

Proof of purchase is required for all warranty claims.

SERVICE & SUPPORT

In the event of a warranty claim, or if service is required for this product, please contact Aroma® customer service toll-free at:

1-800-276-6286 M-F. 8:30AM-4:30PM. Pacific Time

Or we can be reached online at CustomerService@AromaCo.com.

For your records, we recommend stapling your sales receipt to this page along with a written record of the following:

Date of Purchase:

Place of Purchase:

O podemos ser alcanzados en linea en CustomerService@AromaCo.com.

este producto, póngase en contacto con Aroma® de servicio al cliente al

En la eventualidad de un reclamo de garantia, o si el servicio se requiere para

SERVICIO Y SOPORTE

Para su registro, le recomendamos grapar su recibo a esta pagina, junto con un

registro escrito de lo siguiente:

L-V, 8:30AM - 4:30PM, Tiempo del Pacifico

-nôgk qe combka:

Fecha de compra:

9829-972-008-1

unmero gratuito:

de devolución. Espere entre 2-4 semanas para recibir el aparato nuevamente. feletónico gratuito que está más abajo para obtener un número de autorización

qe dne ei sparato sea desarmado o se le de mantenimiento en un centro de negligencia por parte del usuario. La garantia también es inválida en caso Esta garantia no cubre la instalación incorrecta, el uso indebido, maltrato o

Housewares Company. Antes de devolver un producto, sirvase llamar al numero

cnsugo el broducto ses devuelto, con el fi ete prepagado, con comprobacion de

reemplazara, a su opción, las partes defectuosas sin ningún costo, siempre y

Dentro de este periodo de garantia, Aroma Housewares Company reparará o

eu ana wateriales y tabricación durante un periodo de dos anos a partir de la

Aroma Housewares Company garantiza que este producto no tenga detectos

GARANTIA LIMITADA

comprobada de compra dentro de los Estados Unidos.

AITNARAĐ 🔞

compra y \$15.00 dolares para cargos de envio y manejo a tavor de Aroma

estado a otro y no cubre áreas fuera de los Estados Unidos. Esta garantia le da derechos legales especifi cos los cuales podrán variar de un

• La prueba de compra es necesaria para todos los reclamos.

L-V, 8:30 AM - 4:30 PM, Tiempo del Pacifico 9879-977-008-1 San Diego, California 92121 6469 Flanders Drive AHOMA HOUSEWARES COMPANY

Sitio Web: www.AromaCo.com

servicio no autorizado.